Installation instructions



Set content

■Mounting plate

(1 piece)

■SLS-ELAN body(1 piece)

Fixing bolt for

(1 piece)

Installation drawing

Handle (not included)

Mounting plate

Door hanging hinge (Sold Separately)

Dimensions indicated in

from the dimensions above.

seal of a thickness up to 4mm.

Concealed Hinge 230-26/19T(19mmOverlay)

Concealed Hinge 230-26/9T(9mmOverlay)

 
Concealed Hinge 230-26/0T(Inset)

Example:

mounting plate

19mm overlay concealed hinge (not included)

SLS-ELAN-ML(4.9~7.35N·m) SLS-ELAN-MR(4.9~7.35N·m) SLS-ELAN-HL(7.35~9.8N·m) SLS-ELAN-HR(7.35~9.8N·m)

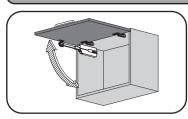

Dear Customer:

The SLS-ELAN stay was designed and manufactured with Sugatsune utmost care in order to give you a high performance and smooth operation on a long-term basis. We ask you to follow these instructions for best possible results and carefree use throughout its lifetime.

Safety recommendations:

- · Sugatsune recommends for the installation to be made by a professional carpenter or installer.
- · The SLS-ELAN stay contains some very strong springs: for your own safety, do not fold the arm before it is securely attached to the door. Failure to observe this advice may lead to bodily injury.
- · Do not disassemble the arm or body of the stay.
- · Please use this stay only within the specifications indicated below.
- · Standard temperature of use is 0 to 40°C.

Warranty

- · Do not pull the arm down without door attached as it will spring back up violently and may cause serious injuries.
- · The SLS-ELAN stay was produced with a particular attention to its quality. Should you however experience any difficulty, please refer to your local supplier or the Sugatsune export department (export@sugatsune.co.jp).
- · The liability of Sugatsune is limited to the replacement or repair of the stay itself. Sugatsune cannot accept any liability for damaged incurred while using this stay. Standard guaranty is for a one-year period from the date of shipment.

Specifications

■ SLS-ELAN specifications are applicable in the list below. For dimensions other than mentioned below, select the type based on the calculation below.

SLS-ELAN-HL(R) SLS-ELAN-ML(R)

*The following table provides an overview of the possible door sizes for which SLS-ELAN can be used.

*It is given on an indicative basis only and does not constitute a guaranty in itself. Please always test assembly.

*Torque shown for 1 stay. Double if used in pairs.

Calculation method

 $\frac{\text{Door height(m)}}{\text{Door height(m)}} \times \frac{\text{Weight of door}}{\text{Weight of door}}$

 $4.9\sim7.35N\cdot m(50\sim75kgf\cdot cm)$: SLS-ELAN-ML(R) 7.35~9.8N·m(75~100kgf·cm): SLS-ELAN-HL(R)

5.0 3.5 3.0 500 520 540 560 580 600 320 340 360 Door height (mm)

4 Mounting plate and arm attachment


*Dimensions shown above are in case the mounting plate

When using thicker packing seal, deduct its thickness

When packing seal thickness is 5mm, dimensions are:

168-5=163mm, 200-5=195mm

230-P4W-30T or 230-P4W-32T are used with.

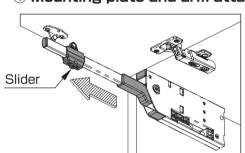

Insert the pin of the mounting plate in the Slider

■Body cover (1 piece)

(right cover is symmetrical)

■Main body fixing

(2 pieces)

screws 3.5x35

270)

(47)

Left cover shown

D

■Mounting plate fixing

screws 3.5x15

(2 pieces)

Body

(168)

(200

25

25

Door thickness

C

В

27 59

47 79

above are for packing

37 69

D

 
160


160

A+135

·Line up the Slider with the pin of the mounting plate

5 Final adjustment

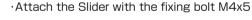

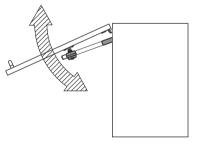


Loosening **Tightening** Adjustment screw

If you feel that the door is too light (self lift-up) or too heavy (self-closing) it is possible to limit the action of the spring by tightening the adjustment screw.


⚠ When using a light door, an under-tightened adjustment screw may result in a fast opening of the door.

 \triangle Do not over-tighten the adjustment screw as this may damage the Slider.

6 Cover assembly and removal

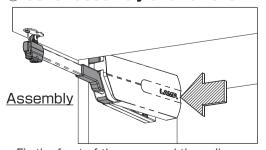

Fix the front of the cover and then clip the back in place.

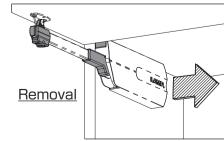

To remove cover, pull the back side first.

SUGATSUNE KOGYO CO.,LTD +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp SUGATSUNE KOGYO (UK) LTD
Reading. IIK Reading, UK hone: +44 118 9272 955 E-mail:sales@sugat

SUGATSUNE SHANGHAI Co., LTD Shanghai. CHINA Shanghai, CHINA
Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn Guangzhou, CHINA Phone: +86 20 6639 3552 E-mail:lamp@sugatsune.com.cn

SUGATSUNE AMERICA, INC California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

SUGATSUNE KOGYO INDIA PRIVATE LIMITED


BUSAGUARE (AGERMANY


Disseldorf, GERMANY

Fhone: +49 21 S3814409 (1 E-mail:sales@sugatsune.in


ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified. E-mail:support@sugatsune.ca


Installation

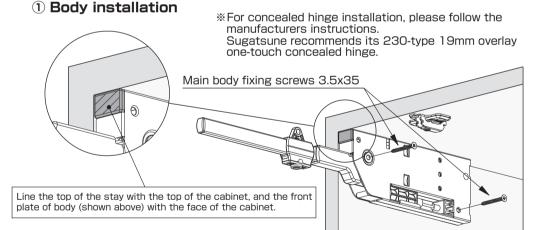

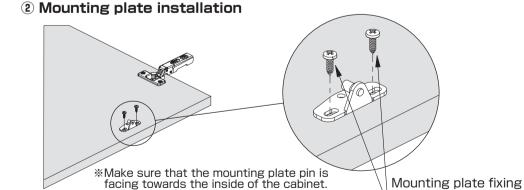

3 Door installation

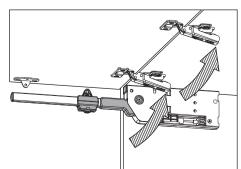

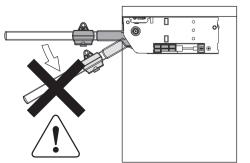

screws 3.5x15

<u>/!\ Do not pull the arm down without door attached as it will</u> spring back up violently and may cause serious injuries.

3