
TORQUE HINGE Installation Instructions Designates.

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.


Item Code	Item Name	Torque working Direction	Torque
170-032-969	HG-TQJ100-A	Opening	0-10N·m(0-102kgf·cm)
170-032-970	HG-TQJ100-B	Closing	0-10N·m(0-102kgf·cm)

INSTALLATION PROCEDURE

1.Remove the covers by screw driver.

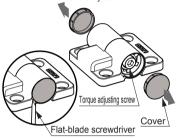


2. Fix hinges with the screws.

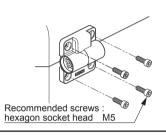


3.Adjust the torque of hinges to work torque effectively.

Turn the adjustment screw while holding the slotting on the opposite side.

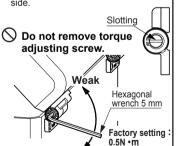

4. Put the covers on the hinges.

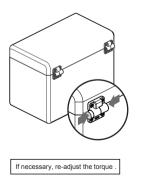



SUGATSUNE KOGYO CO.,LTD Tokyo, JAPAN

Manufacturer of **LAMP** brand Products

Phone: +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp