

## Push Knob Latch


# TLP · TLP-S Assembly instructions

### 1 Choice of Push rod

Choose a Push rod which suits the thickness of door.

Push rod 	Door thickness	Length of push rod	
		TLP	TLP-S
	19 — 24 mm	S(24 mm)	L(25 mm)
	25 — 30 mm	S(30 mm)	L(31 mm)


### 2 Assembly of Push knob

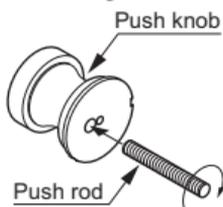

【1】Screw Push rod by hand until it stops.

【2】Wrap Push rod with a cloth, then screw it with pliers strongly. (Take care not to damage the thread on Push rod.)

【3】Check assembled dimension.

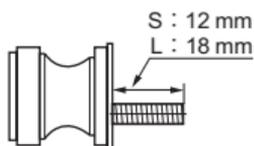


Assembled dimension



Incomplete assembly may cause a wobbling of Push knob during use.

### 3 Assembly of Push knob latch

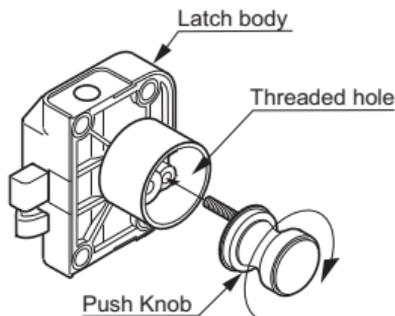

**SUGATSUNE KOGYO CO.,LTD.**

Manufacturer of **LAMP** brand Products

2017.04 1025-3