


# Push Knob PK04, Push Knob Latch PKL05 Installation Manual

Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation.  
Please keep this manual at hand for future reference.

## ABOUT THE PRODUCT

- A knob (PK04) or latch (PKL05) that becomes flush with its surroundings when the knob is pushed in.
- PK04 only**
  - 15-35 mm thickness without cap, 29-39 mm thickness with cap (sold separately).
- PKL05 only**
  - 15-30 mm thickness without spacer, to 13 mm thickness with spacer (sold separately).
  - Pushing the knob in while the door is closed will lock it. Pushing the knob again will unlock it.
  - Available in both right hanging and left hanging types, and both overlay and inset doors.

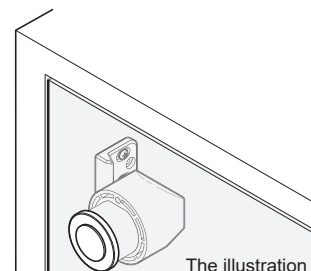

The illustration shows PKL05.

## DOOR SPECIFICATION


	Door thickness		
	Single bore	Dual bores	with optional parts
<b>PK04</b>	15-35	26-35	29-39
<b>PKL05</b>	15-30	—	13

## DIMENSIONS


DT=Door thickness

### PK04



[DT:15-25 mm]

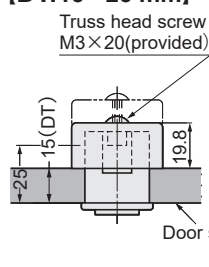

[DT:26-35 mm]

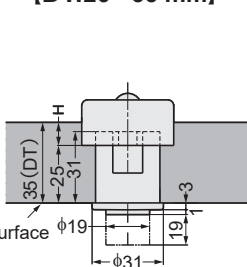

[DT:29-39 mm]

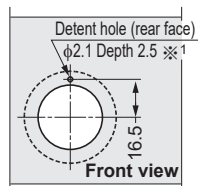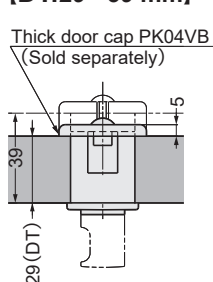


※<sup>1</sup> Applicable to door thickness 15-35





Door thickness(DT)	Bore depth(H)
15-25	—
26-35	DT-25 (Back of the door)
29-39※ <sup>2</sup>	—

※<sup>2</sup> When using cap (PK04VB)

### PKL05

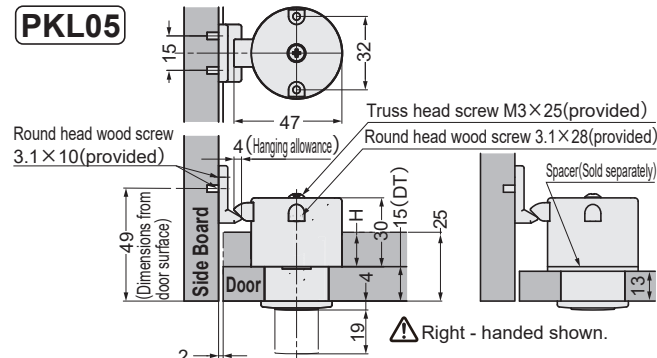

△ Right - handed shown.

 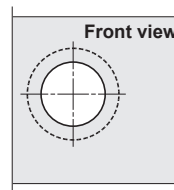


Door thickness	Bore depth(H)
13	— (with spacer)
15-25	DT-15 (Back of the door)


## INSTALLATION

### PK04


[DT:15-25 mm]

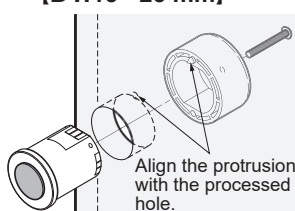

[DT:26-35 mm]

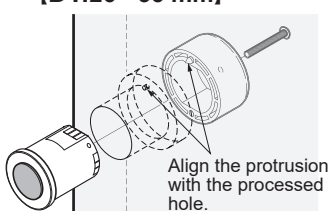


[DT:29-39 mm]

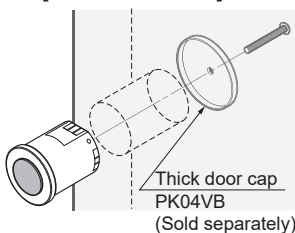

### OPERATION CHECK

- Push the part and the knob comes out

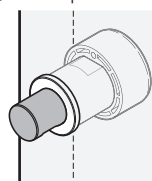


### PKL05


1 Mounting the counter plate



2 Mounting parts

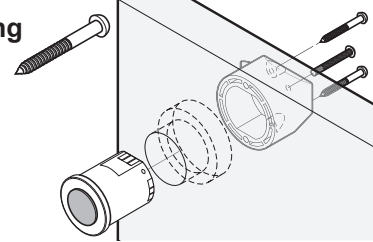


3 Adjusting counter plate

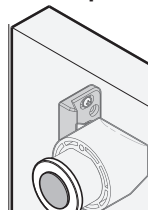

Close the door and check the latching action and adjust if needed.

### OPERATION CHECK

- When you push the part, the knob comes out and the latch is released.

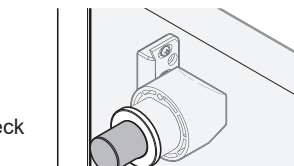

△ Be sure to push the knob at closed position. Latch may be damaged if you close the door after pushing the knob.

**SUGATSUNE KOGYO CO.,LTD**  
Tokyo, JAPAN  
Phone: +81 (0)3 3866 2260 E-mail: export@sugatsune.co.jp

**SUGATSUNE KOGYO (UK) LTD**  
Reading, UK  
Phone: +44 118 9272 955 E-mail: sales@sugatsune.co.uk

**SUGATSUNE EUROPE GmbH**  
Düsseldorf, GERMANY  
Phone: +49 211 53812900 E-mail: sales@sugatsune.eu

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

**SUGATSUNE SHANGHAI Co., LTD**  
Shanghai, CHINA  
Phone: +86 21 3632 1858 E-mail: lamp@sugatsune.com.cn

**Guangzhou, CHINA**  
Phone: +86 20 6639 3552 E-mail: lamp@sugatsune.com.cn

**SUGATSUNE KOGYO INDIA PRIVATE LIMITED**  
Mumbai, INDIA  
Phone: +91 22 28314490/91 E-mail: sales@sugatsune.in

**SUGATSUNE AMERICA, INC**  
California, USA  
Phone: +1 310 329 6373 E-mail: sales@sugatsune.com

**Chicago, USA**  
Phone: +1 630 317 7072 E-mail: sales@sugatsune.com

**SUGATSUNE CANADA, INC.**  
Phone: +1 514 312 5267 E-mail: support@sugatsune.ca