

LAMP® LL-66S LEVER LATCH INSTALLATION INSTRUCTION

Thank you for purchasing our product.
Be sure to read and install this product correctly. Keep this manual handy for future reference.


ABOUT THIS PRODUCT

This is for an overlay door to prevent door from opening by the shock of earthquake, but heavy items may fall inside the cabinet and cause the door to be forced open. Refrain from storing heavy items inside cabinet.

Recommended door dimension: 700 mm (27") H x 500 mm (20")

Applicable cabinet: The under edge of door having 34 mm or more space under the bottom board of the cabinet.

DRAWINGS

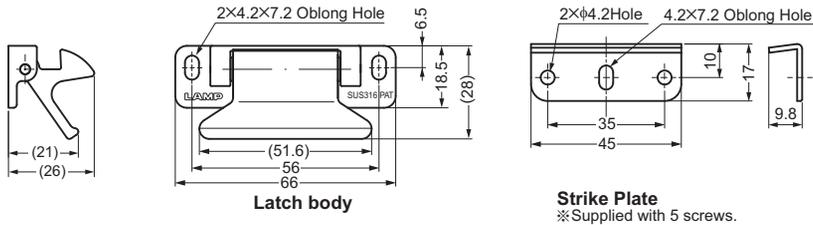


STEP

STEP-1 On the back side of the cabinet door, draw a horizontal LINE-A representing the bottom of the cabinet.

Measure 60 mm (minimum) from the side edge of the door, and then draw a vertical LINE-B.


With the door closed, draw the same LINE-A and LINE-B onto the bottom board of the cabinet. Based on these lines, find two points and bore holes of 2-3 mm depth using a gimlet, at the position shown in the drawing.

※ Include distance for spacers or any other objects placed between the door and the cabinet.

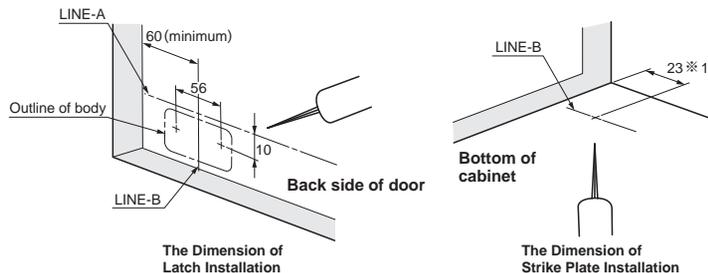


STEP-2 Mount the body of the unit to the back of the cabinet door and mount the strike plate to the bottom of the cabinet, but do not tighten the screws down at this time.

Ensure that the latch body is parallel with the bottom edge of door and the strike plate parallel with the front edge of cabinet as shown in the drawing.

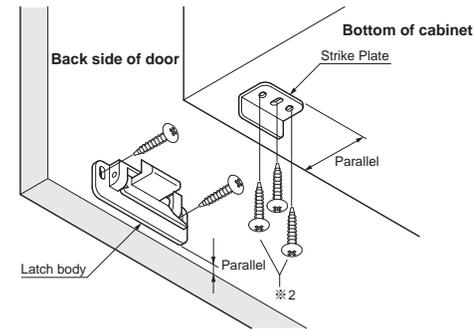

STEP-3 Check how the latch works by opening and closing the door.

With the door closed, move the latch body to adjust until it is parallel with the bottom board of the cabinet. Then tighten all the screws.

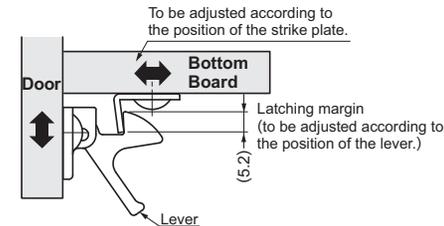

In the case that the door joints were adjusted at the hinges, adjust the latch accordingly.

To operate: Pull the lever and open the door.

REMARKS

The latch may become unable to operate normally during long usage due to warping or sagging of doors. In such a case, adjust the construction of doors or the position of installation of this product.



SUGATSUNE KOGYO CO., LTD
Tokyo, JAPAN
Phone: +81 (0)3 3866 2260 E-mail: export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LTD
Reading, UK
Phone: +44 118 9272 955 E-mail: sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH
Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail: sales@sugatsune.eu

SUGATSUNE SHANGHAI Co., LTD
Shanghai, CHINA
Phone: +86 21 3632 1858 E-mail: lamp@sugatsune.com.cn

SUGATSUNE KOGYO (CHINA) LTD
Guangzhou, CHINA
Phone: +86 20 6639 3552 E-mail: lamp@sugatsune.com.cn

SUGATSUNE KOGYO INDIA PRIVATE LIMITED
Mumbai, INDIA
Phone: +91 22 28314490/91 E-mail: sales@sugatsune.in

SUGATSUNE AMERICA, INC
California, USA
Phone: +1 310 329 6373 E-mail: sales@sugatsune.com

SUGATSUNE AMERICA, INC
Chicago, USA
Phone: +1 312 461 1081 E-mail: chicagoshowroom@sugatsune.com

SUGATSUNE CANADA, INC.
Phone: +1 514 312 5267 E-mail: support@sugatsune.ca