

LAMP[®] HT-G70 Door Stopper


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

■ FOR YOUR SAFE WORK AND CORRECT INSTALLATION


Meaning of symbols




⚠ Caution If these cautions are not followed, it may result in injury or damage.

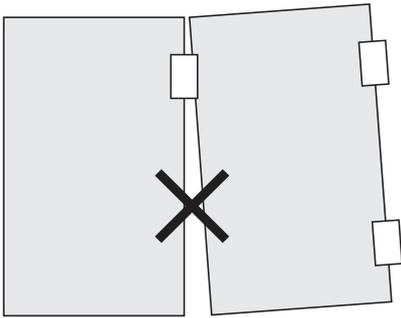

⊘ Door should not be inclined.

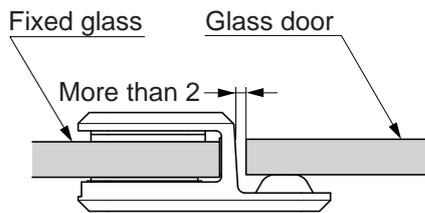


⚠ Clearance between the stopper and door must be more than 2mm.

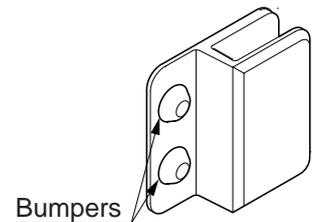


⚠ Periodically check if bumpers are clean.

■ COMPONENT PARTS

① Stopper : 1pc

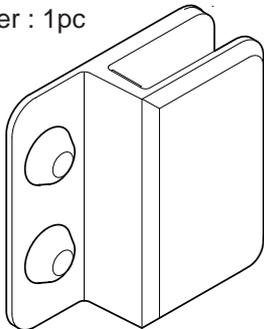

② Retaining plate : 1pc

 


③ Gasket : 2pcs




■ INSTALLATION

1. Using a template, confirm installation position. Then set rubber side of retaining plate ② to the fixed glass. Use required number of gaskets ③ in the stopper ① (refer below table).

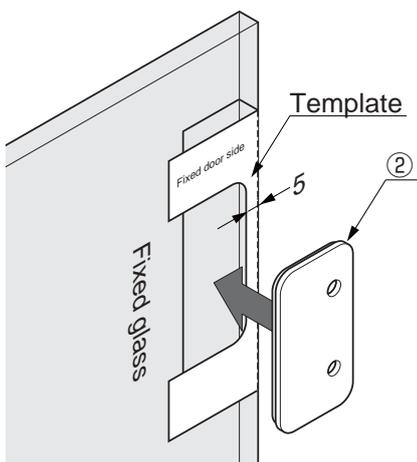


■ Quantity of gasket required


	Glass thickness		
	8mm	10mm	12mm
Q'ty	2	1	0

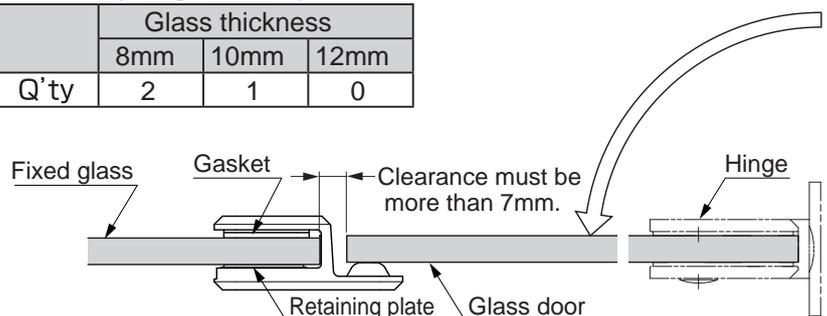

2 .On the gasket set face, paste required quantity gasket ③ . And, install stopper ① .

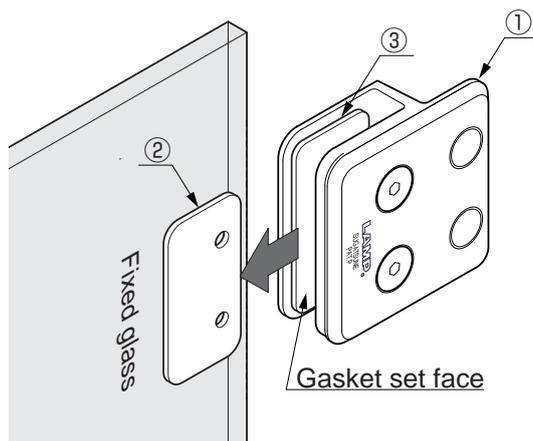


3 .Tighten attached screws to tighten the stopper ① . Recommended torque: 1.5 N/m

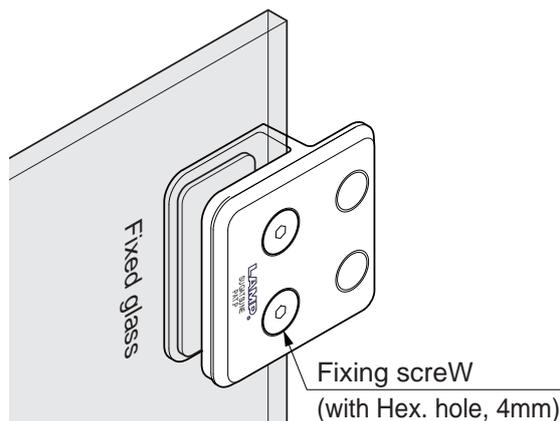

■ In order to reduce the clearance between door and fixed glass with glass cutout.

Glass Process Drawing

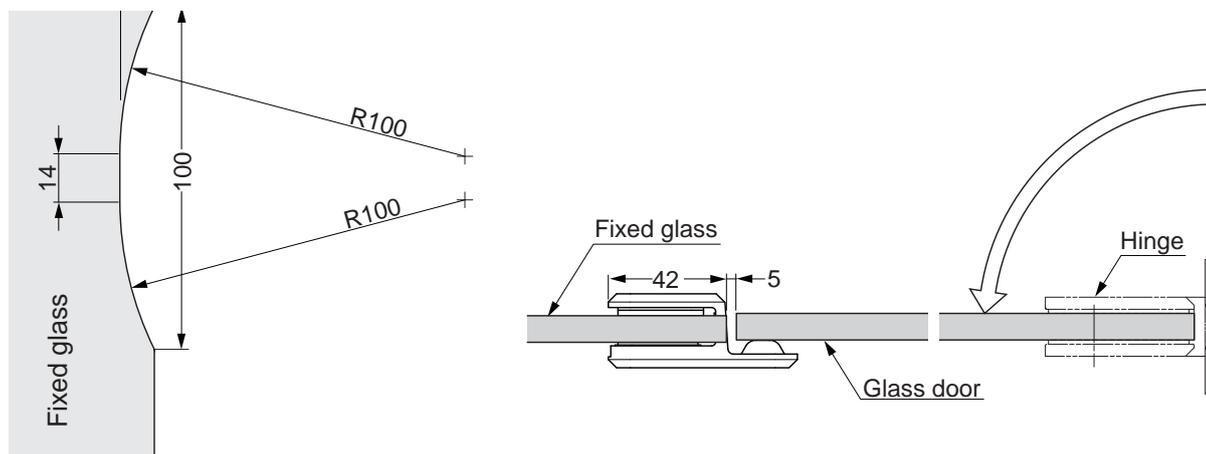

SUGATSUNE KOGYO CO.,LTD.
 Phone: +81 3 3866 2260
 F a x : +81 3 3866 4447
 E-mail: export@sugatsune.co.jp
 Website: www.sugatsune-intl.com

SUGATSUNE KOGYO (UK) LTD.
 Phone: +44 118 9272 955
 F a x : +44 118 9272 871
 E-mail: sales@sugatsune.co.uk
 Website: www.sugatsune.co.uk

SUGATSUNE AMERICA, INC.
 Phone: +1 310 329 6373
 F a x : +1 310 329 0819
 E-mail: sales@sugatsune.com
 Website: www.sugatsune.com

SUGATSUNE SHANGHAI CO., LTD.
 Phone: +86 21 3632 1858
 F a x : +86 21 3632 1868
 E-mail: lamp@sugatsune.com.cn
 Website: www.sugatsune.com.cn

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

2017.05 1138-1

