# **LAMP**By Push knob Latch DPL-RO / DPL-OV / DPL-SQ Installation manual


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

#### Parts list

- · Knob body: 1
- · Latch body: 1
- · Counter plate: 1
- Screws "A" for push knob and latch body assembly (cross recessed binding head tapping screw 4x20); 2
- Screws "B" for counter plate and latch body installation (cross recessed pan head tapping screw 3x14): 5
- · Installation manual: 1 (this manual)

### Applicable door thickness

15 mm - 25 mm

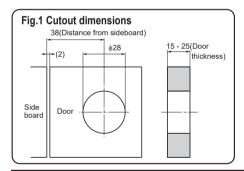

## Fig.2 Installation drawing from door backside) 38(Distance from sideboard) 25(Door thickness) ტ19 Push knob Knob body (Distance Side Door 15 - 3 board 20 Latch body Screws"A" Counter plate Screws"B' 17 Screws"B" DPL-RO

#### Installation procedure

- 1 Drill a \$28mm hole in the door. (See Fig. 1, Fig. 2)
- Insert the knob body into the hole from the front of the door. Match the position of the latch body to that of the knob body at the back of the door and assemble using the 2 screws "A". Fix the latch body to the door by using 2 screws "B".

#### Cautions -

- Tighten assembly screws "A" enough to have a secured assembly.
- Do not over tighten assemble screws "A" as it may damage the latch body.
- Do not use any assembly screws other than the provided screws "A" as it may damage the latch body.
- 3 Attach the counter plate in the designated position (Fig.2) on the sideboard, using 3 screws "B".

Note: In Fig. 2, dimensions marked by \*\* are lengths from the backside of the door, regardless whether it is an inset door and overlay application

#### Cautions -

- Never close the door with the push knob in the pushed (closed) position as it may break the latch.
- Attempting to disassemble this product as you may result in injury.

## SUGATSUNE KOGYO CO., LTD. Tokyo, JAPAN

Phone: +81 3 3866 2260 E-mail:export@sugatsune.co.jp

## SUGATSUNE KOGYO (UK) LIMITED Reading, UK

Phone: +44 1189 272 955 E-mail:sales@sugatsune.co.uk

#### SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY

Phone: +49 211 53812 900 E-mail:sales@sugatsune.eu

## SUGATSUNE AMERICA, INC. California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Phone: +1 630 317 7072 E-mail:sales@sugatsune.com

### SUGATSUNE CANADA, INC. Montreal, CANADA

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

### SUGATSUNE SHANGHAI CO., LTD. Shanghai, CHINA

Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn

#### Guangzhou, CHINA Phone: +86 20 6639 3554

E-mail:lamp@sugatsune.com.cn

## SUGATSUNE KOREA CO., LTD. Incheon, KOREA

Phone: +82 32 220 0603 E-mail:sales@sugatsune-korea.co.kr

#### SUGATSUNE KOGYO INDIA PRIVATE LIMITED Mumbai, INDIA

Phone: +91 9867299597 E-mail:sales@sugatsune.in **Delhi. INDIA** 

Phone: +91 9867299597 +91 11 45093636 E-mail:sales@sugatsune.in

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.