Damper Hinge HG-JHW16SG Installation Instructions LAMP

HG-JHW16SG damper hinge was designed and manufactured with Sugatsune's utmost care in order to give you a high performance and smooth operation on a long time basis. We ask you to follow these instructions for the best possible results and carefree use throughout its lifetime.

Safety recommendations If not followed, injury or damage may result. —


- •Please use this damper hinge only within the specifications shown in this manual.
- ■Do not disassemble
- Do not close the door violently or it can cause damage to the product.

Warranty If not followed, injury or damage may result. -


- ♠HG-JHW16S damper hinge was produced with a particular attention to its quality. Should you however experience any difficulty, please refer to your local supplier or Sugatsune Export Department (export@sugatsune.co.ip).
- △The liability of Sugatsune is limited to the replacement of the damper hinge itself.
- A Sugatsune cannot accept any liability for damage incurred while using this damper hinge.
- ∆Standard warranty is for one-vear period from the date of shipment.

/! Checking before the installation If not followed, injury or damage may result,


- •The product can be fitted to any of the three types of doors shown at right.
- •Use the product within the prescribed load torque range (See the table in 2.Specifications)
- An excessive load torque can cause damage to the product.
- Provide a door stopper to prevent the product from turning beyond the prescribed range
- (See 3.Damper Effective Angle and 6.Application Examples).
- •When more than one hinge is used for a door, fit them paying attention to the shaft alignment. An off-center shaft can increase the load or prevent smooth hinge operation.

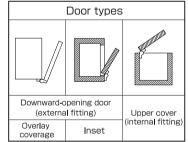

Dimensions

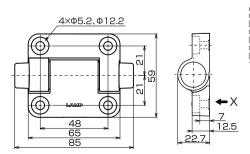

 ✓!\Screws not included Recommended screw and washer M5 hexagon socket head screw × 4 washer 5mm in nominal diameter × 4




2. Specifications

	Item No.	Moment N·m[kgf·cm]	UDH-16S Model No.(identification)
	HG-JHW16S-34G	2.0~3.4[20.4~34.7]	M-type(Blue)
	HG-JHW16S-50G	3.4~5.0[34.7~51.0]	H-type(Red)


*The moment indicated is at 1 nc use

Operating temperature : 0 to 40°C Operating humidity : Max90%RH

 *The damper force is affected by room temperature.



3. Damper Effective Angle

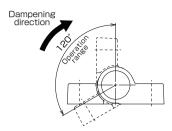


4. Installation Procedure


1. Fix the product to the cabinet referring to 3.Damper Effective Angle and 6.Application Example



 2. Open/close the door and check if the door moves smoothly and the damper is effective.




 
5. Maximum Moment Calculation



Moment= $W \times G \times 9.80665(N \cdot m)$

6. Application Examples

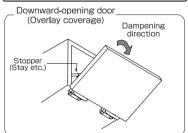

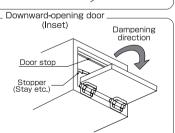


\bigwedge **Caution**: How to assemble the Damper Hinge

By any chance the product is disassembled, please reassemble as per below

1: Insert the UDH-16S into Part 1. (See 2. Specifications)

Make sure that the Axle and Identification Mark is correct. Wrong setup may cause breakage to the UDH-16S

2: Insert Part2 and 3 to Part1 (See 1.Dimensions)

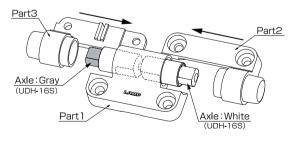

SUGATSUNE KOGYO CO.,LTD SUGATSUNE SHANGHAI Co., LTD Tokyo, JAPAN Phone: +81 (1)3 3866 2260 E-mail-export@sugatsune.cojp Phone: +86 21 3832 1858 E-mail-tamp@sugatsune.cojp Phone: +86 21 3832 1858 E-mail-tamp@sugatsune.co

SUGATSUNE KOGYO (UK) LTD

Reading, UK
Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH

Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

SUGATSUNE KOGYO INDIA PRIVATE LIMITED SUGATSUNE CANADA, INC.

E-mail:lamp@sugatsune.com.cn

E-mail:lamp@sugatsune.com.cn

Mumbai, INDIA Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

Guangzhou, CHINA

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified

SUGATSUNE AMERICA, INC California, USA Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Chicago, USA Phone: +1 630 317 7072 E-mail:sales@sugatsune.com

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

2022 07 1264-2