


LAMP® XL-GC01 Double Door Lock Installation Manual

Thank you for using our product. Before installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

Caution Mishandling or wrong installation of this product may lead to injury. Always clear the working area of any hazardous object before proceeding with the installation.

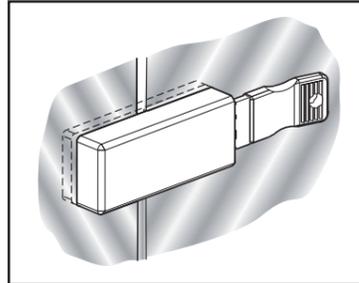


Parts List

Before installation, please be sure to confirm all parts are contained in package.

- | | |
|-----------------------|----------------------------|
| ① ... Lock Body ×1 | ⑤ ...Key ×2 |
| ② ...Strike Plate ×1 | ⑥ ...Clear Bumper BS-12 ×1 |
| ③ ... Fixing Screw ×4 | ⑦ ...Clear Bumper BS-6 ×2 |
| ④ ...Gasket ×4 | ⑧ ...Clear Bumper BS-2 ×2 |
| | ⑨ ...Clear Bumper BS-32 ×2 |

Glass Processing

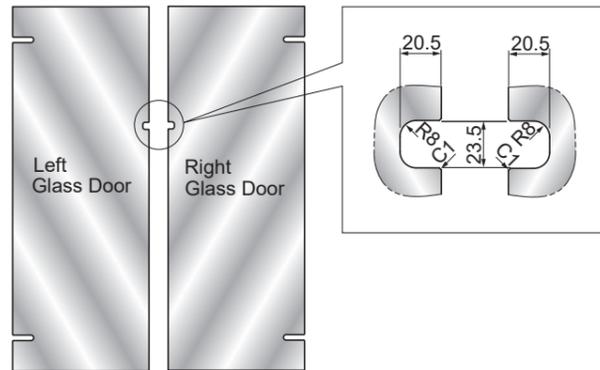


Caution


- Maximum door size is W500 mm x H1200 mm.⁽¹⁾
- Maximum door weight is 12kg.⁽¹⁾
- Applicable glass thickness is 5,6 or 8mm.
- Should you have any question with regards to the glass cut out, please contact your local glass supplier.

⁽¹⁾ Only applies when using in combination with XL-GC07 hinge.

Lock Installation Position

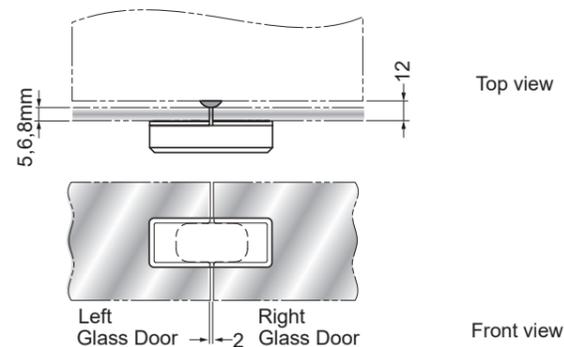


1 Lock Body Assembly

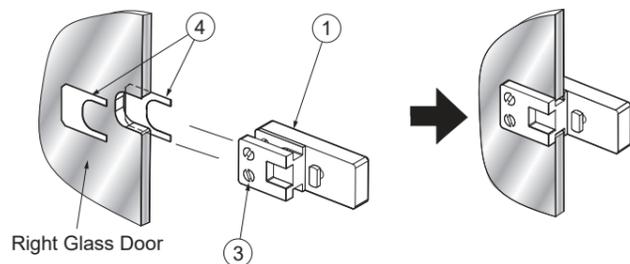

Inside view

Insert the lock body ① with the gaskets ④ into the glass door so that the gaskets will stay between the lock body and the glass door. then fasten the fixing screws ③.


2 Strike Plate Assembly

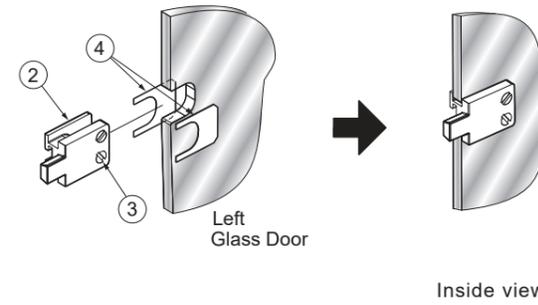

Inside view

Insert the strike plate ② with the gaskets ④ into the glass door so that the gaskets will stay between the strike plate and the glass door. then fasten the fixing screws ③.

4 Key Operation

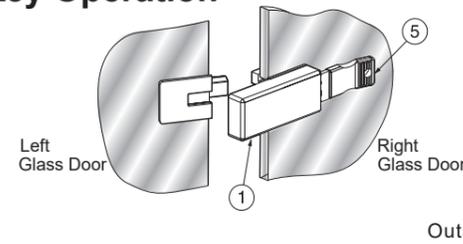

Outside view

- To lock
With the key inserted, close the door. Then pull out the key.
- To unlock
Insert the key into the slot.

Caution


- Do not close the door without inserting the key. It may cause damage.

6 Bumpers

Top and Bottom Panel	Door Thickness	Bumpers (T)
5~8	5 mm	⑦ BS-6 (6.2)
	6 mm	⑧ BS-2 (5)
	8 mm	⑨ BS-32 (3.1)


Affix clear bumpers which match the glass thickness to the top and bottom of both doors, where the glass makes contact with the cabinet body.

3 Locking Operation

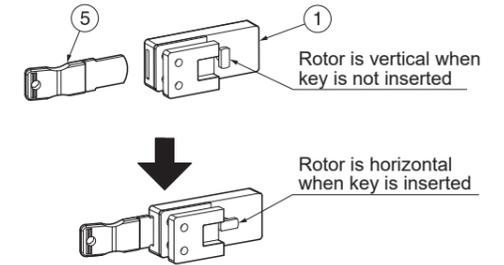

- Insert the key ⑤ into the slot of the lock body ①.
- Verify that the rotor becomes horizontal.


5 Lock Alignment

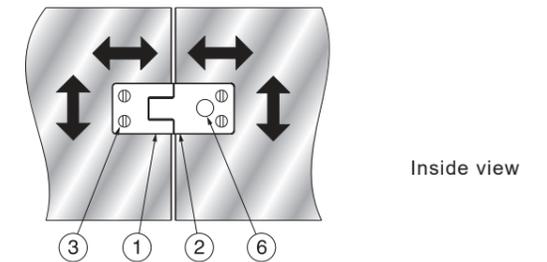

Inside view

- Loosen the fixing screws ③ then align the lock body ① and the strike plate ② so that they will lap over each other.
- Affix the clear bumper BS-12 ⑥ on the rear of strike plate ②.

7 Door Alignment

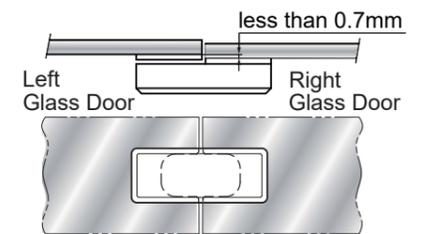

Using the adjustment of the hinges, align the glass door positions as above.

SUGATSUNE KOGYO CO.,LTD
Tokyo, JAPAN
Phone: +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp

SUGATSUNE KOGYO (UK) LTD
Reading, UK
Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

SUGATSUNE EUROPE GmbH
Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

SUGATSUNE SHANGHAI Co., LTD
Shanghai, CHINA
Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOGYO (CHINA) LTD
Guangzhou, CHINA
Phone: +86 20 6639 3552 E-mail:lamp@sugatsune.com.cn

SUGATSUNE KOGYO INDIA PRIVATE LIMITED
Mumbai, INDIA
Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

SUGATSUNE AMERICA, INC
California, USA
Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

Chicago, USA
Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

SUGATSUNE CANADA, INC.
Phone: +1 514 312 5267 E-mail:support@sugatsune.ca