


LAMP® DOORSTOP MAGNETIC CATCH Item Name: HT-MSG62 HT-MSG62 for Glass Doors INSTALLATION MANUAL

Component Parts

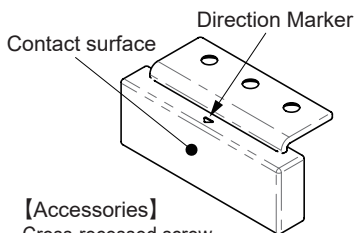

[Accessories]

Cross-recessed screw
M4×12 ... 3 pcs

Required Parts (Sold Separately)


Glass thickness		Strike plate	Packing for strike plate (Chloroprene Rubber)
	A		
8	12.1	HT-MSG62-U8	included in strike plate
10	14.1	HT-MSG62-U10	
12			
12.7	16.1	HT-MSG62-U12	HT-MSG62-P127
13.5			HT-MSG62-P135

Dimensions


⚠ Caution

❗ The strike plate must be installed on the top of the door. Installation on the bottom or side of the door may cause the strike plate to shift or come off.

For standard doorframes

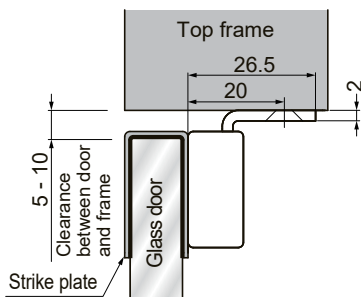

For thin doorframes

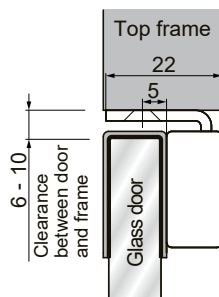

Re-Assembly when Mounting on Thin Frame

