LAMP


3670 SOFT-CLOSE SLIDE Installation Manual




Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

- · Side mount drawer slide with soft-closing mechanism.
- The drawer is detachable by pulling the lever.

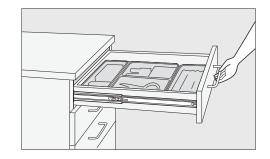

DIMENSIONS, SPECIFICATIONS

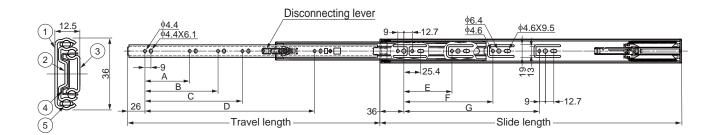

| | | 12.7 ^{+0.8} |
|-----|---------------------|--|
| No. | Part name | Self-closes at 20 mm distance from closed position(250 - 350 mm slide) and |
| (1) | Outer member | at 36 mm distance from closed position (400 - 600 mm slide). |
| 2 | Intermediate member | |
| 3 | Inner member | |
| 4 | Retainer | 37.0₅ |
| (5) | Balls | 37.85 |
| | lon-handed | |


| Item number | slide length | Travel length | Α | В | С | D | E | F | G | Max.drawer width | Load capacity N(kgf)/pair | Box |
|-------------|-----------------|---------------|-----|-----|-----|-----|-----|-----|-----|------------------|------------------------------|-------|
| 3670-250 | 250 | 200 | 124 | _ | _ | _ | 87 | _ | _ | 450 | 147(15) | 20set |
| 3670-300 | 300 | 300 | 174 | _ | _ | _ | 119 | _ | _ | 500 | | |
| 3670-350 | 350 | 350 | 96 | 224 | _ | _ | 119 | 183 | _ | 550 | | 10set |
| 3670-400 | 400 | 400 | 160 | 256 | _ | _ | 119 | 199 | _ | 600 | 196(20) | |
| 3670-450 | 450 | 450 | 96 | 192 | 306 | _ | 119 | 247 | _ | 650 | | |
| 3670-500 | 500 | 500 | 128 | 224 | 356 | _ | 119 | 215 | 295 | 700 | | |
| 3670-550 | 550 | 550 | 128 | 224 | 352 | 406 | 119 | 215 | 345 | 750 | | |
| 3670-600 | 600 | 600 | 128 | 224 | 384 | 456 | 119 | 247 | 375 | 800 | | |



Detaching slides


Pull out inner member until it stops, then pull the disconnect lever to detach.

How to detach

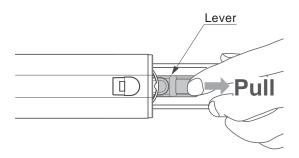

2 Positioning / mounting Outer Member

Correct installation is necessary to enjoy push-to-open function. Mount the slides and make adjustments as follows.

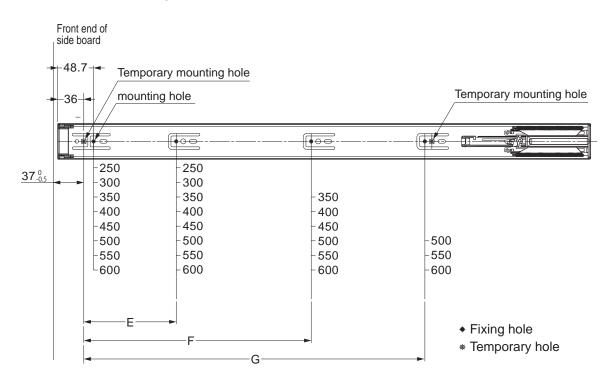


- [1] Mark the positions of the slides on the inside of the cabinet and fit using the temporary mounting holes to give a little bit of adjustment.
- [2] Do not fully tighten the screws just yet. Level up and fix using the round holes and tighten all screws.

Notos

- Move the intermediate member to screw the holes through the access holes.
- Refer to page 1 about the dimensions E, F, and G.



3 Positioning / mounting Inner Member

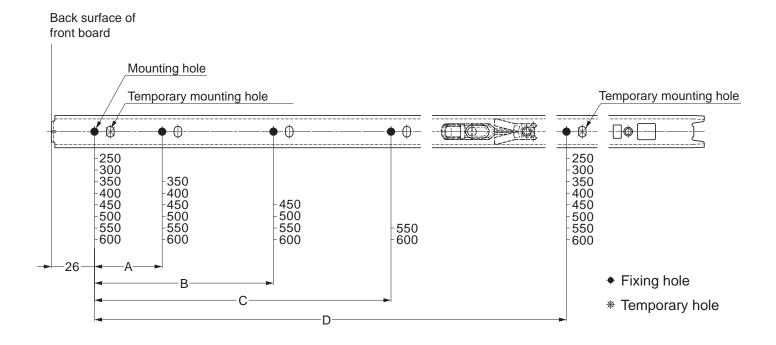


- [1] Fit the inner member to the side of the drawer, either on or just below the center line for optimum stability.
- [2] Level up and fix using the temporary mounting holes and tighten screws to fixing holes.

Notes:

 $\boldsymbol{\cdot}$ Refer to page 1 about the dimensions A to D.

4 Insert Drawer to Cabinet

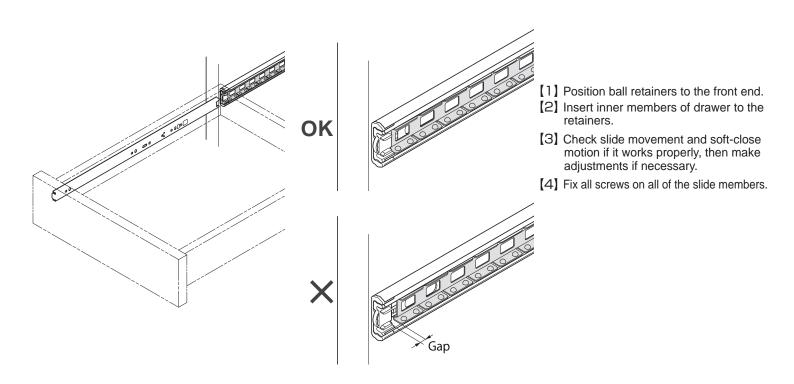



SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

E-mail:lamp@sugatsune.com.cn

Guangzhou, CHINA Phone: +86 20 6639 3552

E-mail:lamp@sugatsune.com.cn

SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

2018.01 1178-2

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca